



富士相机兼容性列表/Compatible FUJIFILM Camera Models

X3Pro F、XPRO II F、X2T-F、Xpro-F、X1T-F 主控从属闪光灯/Transmitter & Receiver Flash Units

| 相机型号<br>Mode | 相机款式<br>Type | TTL闪光控制 /TTL Flash |             |             | M闪光控制 /M Flash |             |             | 重复闪光<br>Multi Flash | AF辅助对焦灯<br>Auto Focus Assist Beam | 备注<br>Note                                                                                                                                                                              |
|--------------|--------------|--------------------|-------------|-------------|----------------|-------------|-------------|---------------------|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|              |              | 标准/Standard        | REAR        | HSS(FP)     | 标准/Standard    | REAR        | HSS(FP)     |                     |                                   |                                                                                                                                                                                         |
| X-Pro2       | A            | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| X-T20        |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| X-T2         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| X-T1         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| GFX50s       |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| GFX50R       |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| X-T30        |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| X-T4         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| X-T3         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| X-T5         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| X-S20        |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| X-H2         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   | ✓                                 |                                                                                                                                                                                         |
| X-Pro1       | B            | ✓                  | ✓           | 不支持         | ✓              | ✓           | 不支持         | ✓                   | 不支持                               | 1. 相机没有高速模式拍摄。<br>These cameras do not have high-speed shooting mode.<br>2. M闪光控制，无法更改相机前帘、后帘模式，相机设置。<br>M mode can not adjust front-curtain, rear-curtain and settings of the cameras. |
| X-T10        |              | ✓                  | ✓           |             | ✓              | ✓           |             | ✓                   |                                   |                                                                                                                                                                                         |
| X-E1         |              | ✓                  | ✓           |             | ✓              | ✓           |             | ✓                   |                                   |                                                                                                                                                                                         |
| X-A3         |              | ✓                  | ✓           |             | ✓              | ✓           |             | ✓                   |                                   |                                                                                                                                                                                         |
| X100F        | C            | ✓                  | 不支持         | Unavailable | ✓              | 不支持         | Unavailable | ✓                   | 不支持                               | 1. 相机没有后帘、高速模式拍摄/The camera does not have rear-curtain and high-speed shooting mode.                                                                                                    |
| X100T        |              | ✓                  | Unavailable |             | ✓              | Unavailable |             | ✓                   |                                   |                                                                                                                                                                                         |

X3 F主控从属闪光灯/Transmitter & Receiver Flash Units

| 相机型号<br>Mode | 相机款式<br>Type | TTL闪光控制 /TTL Flash |             |             | M闪光控制 /M Flash |             |             | 重复闪光<br>Multi Flash | 备注<br>Note                                                                                                                                                                              |
|--------------|--------------|--------------------|-------------|-------------|----------------|-------------|-------------|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|              |              | 标准/Standard        | REAR        | HSS(FP)     | 标准/Standard    | REAR        | HSS(FP)     |                     |                                                                                                                                                                                         |
| X-Pro2       | A            | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| X-T20        |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| X-T2         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| X-T1         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| GFX50s       |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| GFX50R       |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| X-T30        |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| X-T4         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| X-T3         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| X-T5         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| X-S20        |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| X-H2         |              | ✓                  | ✓           | ✓           | ✓              | ✓           | ✓           | ✓                   |                                                                                                                                                                                         |
| X-Pro1       | B            | ✓                  | ✓           | 不支持         | ✓              | ✓           | 不支持         | ✓                   | 1. 相机没有高速模式拍摄。<br>These cameras do not have high-speed shooting mode.<br>2. M闪光控制，无法更改相机前帘、后帘模式，相机设置。<br>M mode can not adjust front-curtain, rear-curtain and settings of the cameras. |
| X-T10        |              | ✓                  | ✓           |             | ✓              | ✓           |             | ✓                   |                                                                                                                                                                                         |
| X-E1         |              | ✓                  | ✓           |             | ✓              | ✓           |             | ✓                   |                                                                                                                                                                                         |
| X-A3         |              | ✓                  | ✓           |             | ✓              | ✓           |             | ✓                   |                                                                                                                                                                                         |
| X100F        | C            | ✓                  | 不支持         | Unavailable | ✓              | 不支持         | Unavailable | ✓                   | 1. 相机没有后帘、高速模式拍摄/The camera does not have rear-curtain and high-speed shooting mode.                                                                                                    |
| X100T        |              | ✓                  | Unavailable |             | ✓              | Unavailable |             | ✓                   |                                                                                                                                                                                         |

奥林巴斯/松下兼容性列表/Compatible Olympus and Panasonic Camera Models

X3 O、X3Pro O、XPRO II O、X2T-O、Xpro-O、X1T-O 主控从属闪光灯/Transmitter & Receiver Flash Units

| 相机型号<br>Mode | 相机款式<br>Type      | TTL闪光控制 /TTL Flash |      |         | M闪光控制 /M Flash |      |         | 重复闪光<br>Multi Flash | 备注<br>Note                                    |
|--------------|-------------------|--------------------|------|---------|----------------|------|---------|---------------------|-----------------------------------------------|
|              |                   | 标准/Standard        | REAR | HSS(FP) | 标准/Standard    | REAR | HSS(FP) |                     |                                               |
| E-M1         | 奥林巴斯<br>Olympus   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| PRN-F        |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| E-M10II      |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| E-M10III     |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| E-PL8        |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| E-P5         |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| E-M5II       | 松下相机<br>Panasonic | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| GH4          |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| LX100        |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| GF1          |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| G85          |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| GX85         |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | 高速存在亮边/Bright edges exist in high-speed mode. |
| FZ2500GX     |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                               |
| S1           |                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | 高速存在亮边/Bright edges exist in high-speed mode. |

注：1. 此表格仅列举目前已测试的相机型号，未涵盖所有相机。其他相机型号，用户可自行测试。  
2. 本公司保留未来修改此表格内容的权利。  
Note: 1. This table only lists the tested camera models, not all cameras. For the compatibility of other camera models, a self-test is recommended.  
2. Rights to modify this table are retained.

索尼相机兼容性列表/Compatible Sony Camera Models

X3Pro S、XPRO II S、X2T-S、Xpro-S、X1S 主控从属闪光灯/Transmitter & Receiver Flash Units

| 相机型号<br>Mode | 相机款式<br>Type                      | TTL闪光控制 /TTL Flash |      |         | M闪光控制 /M Flash |      |         | 重复闪光<br>Multi Flash | AF辅助对焦灯<br>Auto Focus Assist Beam | 备注<br>Note |
|--------------|-----------------------------------|--------------------|------|---------|----------------|------|---------|---------------------|-----------------------------------|------------|
|              |                                   | 标准/Standard        | REAR | HSS(FP) | 标准/Standard    | REAR | HSS(FP) |                     |                                   |            |
| A7III        | 微单相机<br>Mirrorless Cameras        | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A7IV         |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A7R5         |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A7RIII       |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A7RIV        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A9           |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A9III        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A7RIII/V4.0  |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A7R          |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | 不支持<br>Unavailable                |            |
| A6400        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                   |            |
| A6700        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                   |            |
| A6000        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                   |            |
| RX10         | 固定镜头相机<br>Cameras with Fixed Lens | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                   |            |
| A99          | 单反相机<br>SLR Cameras               | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A77          |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A77II        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |
| A350         |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |            |

X3 S主控从属闪光灯/Transmitter & Receiver Flash Units

| 相机型号<br>Mode | 相机款式<br>Type                      | TTL闪光控制 /TTL Flash |      |         | M闪光控制 /M Flash |      |         | 重复闪光<br>Multi Flash | 备注<br>Note |
|--------------|-----------------------------------|--------------------|------|---------|----------------|------|---------|---------------------|------------|
|              |                                   | 标准/Standard        | REAR | HSS(FP) | 标准/Standard    | REAR | HSS(FP) |                     |            |
| A7III        | 微单相机<br>Mirrorless Cameras        | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A7IV         |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A7R5         |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A7RIII       |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A7RIV        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A9           |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A9III        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A7RIII/V4.0  |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A7R          |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A6400        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A6700        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A6000        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| RX10         | 固定镜头相机<br>Cameras with Fixed Lens | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A99          | 单反相机<br>SLR Cameras               | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A77          |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A77II        |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |
| A350         |                                   | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |            |

徕卡相机兼容性列表/Compatible Leica Camera Models

XProII L引闪器主控从属闪光灯/Transmitter & Receiver Flash Units

| 相机型号<br>Mode | 相机款式<br>Type        | TTL闪光控制 /TTL Flash |      |         | M闪光控制 /M Flash |      |         | 重复闪光<br>Multi Flash | AF辅助对焦灯<br>Auto Focus Assist Beam | 备注<br>Note                                                                                                   |
|--------------|---------------------|--------------------|------|---------|----------------|------|---------|---------------------|-----------------------------------|--------------------------------------------------------------------------------------------------------------|
|              |                     | 标准/Standard        | REAR | HSS(FP) | 标准/Standard    | REAR | HSS(FP) |                     |                                   |                                                                                                              |
| SL1          | 新款相机<br>New Cameras | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 | 连拍存在漏闪/Misfire flashes exist in continuous flash.<br>高速拍照存在亮边。<br>Bright edges exist at high-speed shooting. |
| SL2          |                     | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |                                                                                                              |
| M10          |                     | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |                                                                                                              |
| Q2           |                     | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 |                                                                                                              |
| Typ601       |                     | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | ✓                                 | 连拍存在漏闪/Misfire flashes exist in continuous flash.                                                            |

X3 L主控从属闪光灯/Transmitter & Receiver Flash Units

| 相机型号<br>Mode | 相机款式<br>Type        | TTL闪光控制 /TTL Flash |      |         | M闪光控制 /M Flash |      |         | 重复闪光<br>Multi Flash | 备注<br>Note                                                                                                   |
|--------------|---------------------|--------------------|------|---------|----------------|------|---------|---------------------|--------------------------------------------------------------------------------------------------------------|
|              |                     | 标准/Standard        | REAR | HSS(FP) | 标准/Standard    | REAR | HSS(FP) |                     |                                                                                                              |
| SL1          | 新款相机<br>New Cameras | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | 连拍存在漏闪/Misfire flashes exist in continuous flash.<br>高速拍照存在亮边。<br>Bright edges exist at high-speed shooting. |
| SL2          |                     | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                                                                                              |
| M10          |                     | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                                                                                              |
| Q2           |                     | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   |                                                                                                              |
| Typ601       |                     | ✓                  | ✓    | ✓       | ✓              | ✓    | ✓       | ✓                   | 连拍存在漏闪/Misfire flashes exist in continuous flash.                                                            |